

Link/2500 Link/2500 I

User Guide



www.ingenico.com

28-32, boulevard de Grenelle, 75015 Paris - France / (T) +33 (0)1 58 01 80 00 / (F) +33 (0)1 58 01 91 35
Ingenico - SA au capital de 47 656 332 / 317 218 758 RCS Nanterre

Contents

1_Introduction	4
2_Présentation	5
2_1 Content of the box	5
2_1.1 Terminal	5
2_2 Overview of the Link/2500	6
2_3 Keyboard details and functionality	9
2_4 Touch panel (option)	9
2_5 Dual magnetic head (option)	10
2_6 Link/2500 I Integration version (option)	10
3_Use of the terminal	10
3_1 Switching off the terminal	10
3_2 Reading card	11
4_Installation	12
4_1 Recommendation	12
4_2 USB Terminal connections	13
4_2.1 USB type C	13
4_3 Opening trap door	13
4_4 SAMs & SIMs	14

4_5	Battery _____	15
4_5_1	Main characteristics _____	15
4_5_2	Installing the battery _____	15
4_5_3	Charging the battery _____	16
4_5_4	Changing the battery _____	17
5	Recommendations _____	18
5_1	Safety _____	18
5_2	Security of your terminal _____	20
6	Environment (WEEE, Batteries and Packaging) _____	21
7	FCC/IC Compliance _____	21
7_1	Federal Communications Commission (FCC) Statement _____	21
7_2	Industry Canada (IC) Statement _____	22
8	Marking _____	23
9	Troubleshooting _____	24

1_Introduction

We hope that you will be fully satisfied with your new terminal Link/2500 I. This terminal is available in different models. Please select by yourself in this documentation items related to your model.

Read this guide to understand and make the best use of your terminal. It presents you the necessary information about use, installation, maintenance, safety and security recommendations.

WARRANTY / SECURITY



Use only the power supply included with the product to ensure best performance and safety. Maintenance should only be provided by Ingenico authorized technician. Failure to comply with these instructions will void the manufacturer's responsibility.



This symbol indicates an important Warning.



This symbol indicates a piece of advice.

● SEAMLESS PAYMENT

2_Presentation

 
2.1 Content of the box

2.1.1 Terminal

> Link/2500 terminal unit




**> A battery pack disconnected
(except slim and Integration version)**



> USB Cable



> User guide

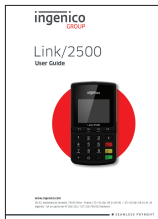

ADVICE

Keep the packaging. It must be re-used whenever the terminal is shipped.

● SEAMLESS PAYMENT

2_2 Overview of the Link/2500



Terminal unit



Touch or Dual head version



Integration Version (Link/2500 I)

➤ 2"4 LCD Display
(Touch panel in option)

➤ Contactless reader

➤ Magnetic
card reader
(second head
in option)



➤ Smart card reader

Compartment where are located (except slim and Integration version):

- the battery pack
- the modules SAM1/SIM1 & SAM2/SIM2



● SEAMLESS PAYMENT

Compartment where are located for Dual magnetic head version :



	Standard	Slim version	Integration version	Touch version	Dual Head version
Weight	155g	121g	128g	165g	168g
Dimensions (L x w x h)	129x70x17 mm	129x70x13 mm	129x70x14 mm	129x70x18,4 mm	129x70x19,4 mm
Electrical mains network	100-240VAC / 50-60 Hz - Class II equipment				
Connections on terminal	USB C connector				

2.3 Keyboard details and functionality



Some keys can have other functions according to the applications that are in the terminal.



The functions key accesses the different application menus

The red key cancels the procedure in progress

The yellow key cancels the last character

The green key validates input selections and information. It is also used to switch on the terminal

2.4 Touch panel (option)

The Link/2500 device could be equipped with touch panel that allows you capture functions and menus by your finger or using a stylus.



● SEAMLESS PAYMENT

2_5 Dual magnetic head (option)

The Link/2500 device could be equipped with a second magnetic head.



2_6 Link/2500 I Integration version (option)





The Link/2500 device could be equipped with a rear connector to be used with another device such as smart phone.



3_Use of the terminal

3_1 Switching off the terminal

If the battery is empty and the terminal in use is removed from its base, the terminal automatically shuts off.

It may also be switch off by pressing simultaneously  and  (yellow key) for one second.

In order to restart the terminal, press  on the keyboard.

3_2 Reading card

Magnetic stripe card

The card can be read either from right to left or left to right, with the stripe facing the terminal. Use a regular movement in order to ensure a reliable card reading.



Option Dual magnetic head version

The card be read either from right to left or left to right, with the strip either facing or backing the terminal. Use a regular movement in order to ensure a reliable card reading.



Smart card

- Card reader : insert the card horizontally with the chip facing upwards and leave in position throughout the transaction.



Contactless

- Bring the card firmly up to the active zone. Keep the card close to the reader during the transaction
- The 4 virtual LEDs are displayed during the transaction.

The terminal behavior for the cardholder may depend on :

- The terminal environment
- Local usage (language...)



4_Installation

4_1 Recommendation

Location of the Link/2500

The terminal should be placed far from any very hot zones, protected from vibrations, dust, damp and electromagnetic radiation (computer screen, anti-theft barrier etc.).

Operating conditions (battery discharging)

Ambient temperature	from -10°C to +50°C
Max relative humidity	85% at +40°C

Battery charging conditions

Ambient temperature	from +0°C to +40°C
---------------------	--------------------


Storage conditions

Ambient temperature	from -20°C to +55°C
Max relative humidity	85% at +55°C

4_2 USB Terminal connections

4_2_1 USB type C

- There is an USB connector (USB type C) on the right side of the Link/2500 Wireless terminal (see below picture). This connector manages Host and Slave connexions.
- The terminal supports USB Keys with FAT16 or FAT32
- The USB Key has to be used with an USB adapter (refers to accessories section)

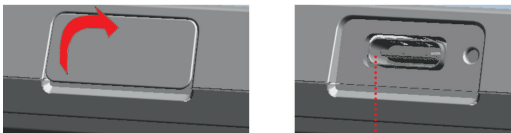

USB type C

Connector used for PC travel charger, USB Key, etc...


4_3 Opening trap door



CAUTION

Switch off the terminal before opening the trapdoor.

- Turn the terminal and unclip the trapdoor by pushing on the clip with as shown with the arrows on the picture

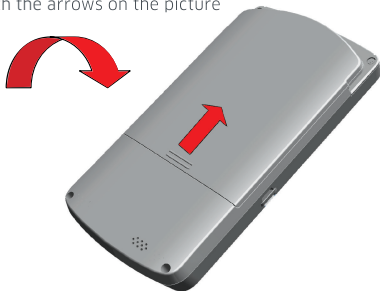

● SEAMLESS PAYMENT




- **Dual magnetic head option :** Turn the terminal and unclip the trapdoor by pushing on the clip with as shown with the arrows on the picture.

4_4 SAMs & SIMs

The connector modules security SAM/SIM is located inside the terminal, in a closed compartment. SAM and SIM location depend of the product. There is 3 possibilities : SIM1/SIM2 or SIM1/SAM2 or SAM1/SAM2.

- SAMs and SIMs are identified by the engraved marks on the lower housing
- When introducing a SAM/SIM in its slot, be sure to put the cut corner as indicated on the engraved marks

- **SAM 2 Connector**
(Dual SIM terminals)
- **SAM 1 Connector**
(Dual SIM terminals)

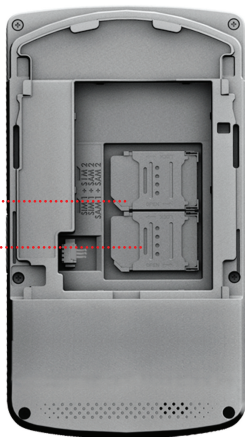

● SEAMLESS PAYMENT

4_5 Battery

4_5_1 Main characteristics

Characteristics	Li-ion 1200 mAh Li-ion 630 Ah (for Slim and Integration version)
Charge (power supply-1.0A)	80% capacity in 1h; full capacity in 1.5 hours

* The battery capacity depends on the model of terminal and its use

4_5_2 Installing the battery (except for Slim and Integration Version)



WARNING

Check that the terminal is not connected to the main electric network.

- Turn your terminal and unclip the battery trapdoor by pushing on the button as shown on the picture (for Dual magnetic head option see section 4_3)
- Disengage the trapdoor
- Take the battery pack included in the box
- Locate the battery pack connector beside the battery compartment
- Plug the battery pack connector according to the connector locating system and (as shown on picture). Verify that it locks.



● SEAMLESS PAYMENT

- Place the battery pack in its compartment.
- Close the battery compartment trapdoor.

> **Battery compartment**



4_5_3 Charging the battery

- > When does the battery need to be charged?
 - On initial start-up, charge the battery for 4 hours under the environmental conditions stated above
 - When used with a terminal power supply : connect the power supply to Link/2500 USB C connector.

- > How does the battery need to be charged?
 - The environment in which the charge takes place influences battery lifetime and autonomy (number of transactions)
The optimal conditions are as follows :
 - Charging away from any external heat source (radiator, sun, enclosed area...)
 - The optimal temperature is between +15°C and +25°C

- > How can the battery be charged?

Using the terminal power supply



- Connect the terminal power supply unit to the terminal type C connector located on the right side of the terminal.
- Connect the power supply unit to the power supply mains network
- **Check to see if the battery symbol is flashing or moving(=battery charging)**


● SEAMLESS PAYMENT

4_5_4 Changing the battery (except Slim and Integration version)



It is imperative to use a battery authorized by Ingenico. There is danger of explosion if battery used is not approved by Ingenico.

- Turn it off by pressing simultaneously  and  (yellow key) for about one second
- Remove the battery trapdoor (see section 4.5.2 "installing battery")
- Lift the battery and remove it from its compartment
- Carefully disconnect battery, following the instructions below.
- Extract the connector by pulling it slightly (arrow) to bring it away from the terminal housing.
- Inform the terminal that battery will be replaced (*). Do not start the terminal or connecting terminal power supply without battery.
- Connect and install the new battery by following the instructions in section 4.5.2 "Installing battery"
- Close the battery trapdoor and charge the new battery. See section "Charging the Battery»
- In order to preserve the environment, dispose used battery in compliance with current country recycling legislation.

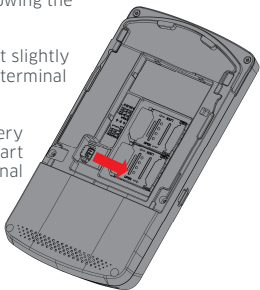

(*)The terminal memorizes that there is no battery simply by powering up. It will then correctly perform-full recharge with the next battery.



The battery disconnection must be exceptional.
Battery connector durability: up to 30 mating cycles

5 Recommendations

5_1 Safety

Powering down the Link/2500 :

Disconnect the Link/2500 power supply block adapter from the electrical mains network.

Lithium cell

The Link/2500 is fitted with an internal lithium cell which can only be accessed by a qualified technician.

Battery

Link/2500 is fitted with battery specially designed for this terminal.

- Only use the appropriate chargers and batteries listed in the Ingenico's catalogue.
- Do not short-circuit the battery.
- Do not attempt to open the battery container.
- Used batteries must be disposed of at the appropriated sites.



WARNING

There is a risk of explosion if the battery is incorrectly replaced or is placed in a fire.

SIM1(SAM1)/SIM2(SAM2) readers' compartment

The trapdoor for battery, SIM1(SAM1)/SIM2(SAM2), readers located underneath the terminal, must be in place during the normal operation of the terminal. See sections «Removal of SAM1/SAM2/SIM, modules» as well as «Connecting the battery».

On airplanes

Your handset must be switched off by removing the battery pack. Remove the battery from the terminal when on an airplane. Non-compliance with these safety rules may result in legal action and/or a ban on later access to cellular network services.

Explosion areas

Certain regulations restrict the use of radio equipment in chemical plants, fuel depots and any site where blasting is carried out. You are urged to comply with these regulations. The terminal shall be protected by a specially fitted and certified cover enabling use in proximity to a fuel pump.

Electronic health appliances

Your handset is a radio transmitter which may interfere with health appliances, such as hearing aids, pacemaker, hospital equipment, etc. Your doctor or the equipment manufacturer will be able to provide you with appropriate advice.

● SEAMLESS PAYMENT

Frequency bands

Transmitter Frequency :	EGSM900/WCDMA900 : 880-915MHz; DCS1800 : 1710-1785MHz WCDMA2100 : 1920-1980MHz Wi-Fi : 2412-2472MHz,5150-5250MHz, 5250-5350MHz, 5470-5725MHz,5725-5850MHz BT : 2402-2480 MHz; NFC : 13.56MHz
Receiver Frequency :	EGSM900/WCDMA900 : 925-960MHz DCS1800 : 1805-1880MHz WCDMA2100 : 2110-2170MHz Wi-Fi : 2412-2472MHz, 5150-5250MHz, 5250-5350MHz, 5470-5725MHz ,5725-5850MHz BT : 2402-2480 MHz; NFC : 13.56MHz
RF-Output Power :	EGSM900 : 32.18dBm(GMSK),27.33dBm(8PSK) DCS1800 : 29.01dBm(GMSK),26.26dBm(8PSK) WCDMA2100 : 22.58dBm WCDMA900 : 22.85dBm Wi-Fi 2.4G Band : 13.07dBm(802.11b),12.74Bm (802.11g), 12.79dBm(802.11n20), 12.90dBm(802.11n40); 5G Band1 : 11.92dBm(802.11a), 12.23dBm(802.11n20),11.88dBm(802.11n40); 5G Band2 : 10.96dBm(802.11a), 10.92dBm (802.11n20),11.45dBm(802.11n40); 5G Band3 : 11.64dBm(802.11a), 11.60dBm(802.11n20),11.32dBm(802.11n40); 5G Band4 : 11.64dBm(802.11a),11.76dBm(802.11n20), 11.39dBm(802.11n40); BT3.0 : 1.75dBm NFC : 19.29dBμA/m@3m (EIRP/Conducted)

● SEAMLESS PAYMENT

5_2 Security of your terminal

Your device fulfils current applicable PCI PTS security requirements. Upon receipt of your terminal you should check for signs of tampering of the equipment. It is strongly advised that these checks are performed regularly after receipt. You should check, for example: that the keypad is firmly in place; that there is no evidence of unusual wires that have been connected to any ports on your terminal or associated equipment, the chip card reader or any other part of your terminal. Such checks would provide warning of any unauthorised modifications to your terminal, and other suspicious behaviour of individuals that have access to your terminal. Your terminal detects any "tampered state". In this state the terminal will repeatedly flash the message "Alert Irruption!" and further use of the terminal will not be possible. If you observe the "Alert Irruption!" message, you should contact the terminal helpdesk immediately.

You are strongly advised to ensure that privileged access to your terminal is only granted to staff that have been independently verified as being trustworthy.

The terminal must never be put in or left at a location where it could be stolen or replaced by another device.



CAUTION

Positioning of the terminal on check stand must be in such a way to make cardholder PIN (Personal Identification Number) spying infeasible.

Positioning of in-store security cameras such way that the PIN-entry keypad is not visible.

NEVER ask the customer to divulge their PIN Code. Customers should be advised to ensure that they are not being overlooked when entering their PIN Code.

6_Environment (WEEE, Batteries and Packaging)

This product is labeled in accordance with European Directives 2012/19/UE concerning Waste Electrical and Electronic Equipment (WEEE) and 2006/66/EC concerning Batteries and Accumulators. Those provisions are requiring producers and manufacturers to become liable for take-back, treatment and recycling upon end of life of equipment and batteries.



The associated symbol means that WEEE and waste batteries must not be thrown away but collected separately and recycled.

Ingenico ensures that efficient collection and recycling schemes are set-up for WEEE and batteries according to the local regulation of your country. Please contact your retailers for more detailed information about the compliance solution in place for disposing of your old product and used batteries.

Packaging waste must also be collected separately to assure a proper disposal and recycling.

Please note that proper recycling of the electrical and electronic equipment and waste batteries will ensure safety of human health and environment.

7_FCC/IC Compliance

7.1 Federal Communications Commission (FCC) Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

15.21

CAUTION : This equipment may not be modified, altered, or changed in any way without signed written permission from "INGENICO". Unauthorized modification may void the equipment authorization from the FCC and will void the "INGENICO" warranty.

15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

15.19 (a) (3)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference and
- 2) This device must accept any interference received, including interference that may cause undesired operation of the device.

7_2 Industry Canada (IC) Statement.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1)** this device may not cause interference, and
- 2)** this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1) l'appareil ne doit pas produire de brouillage, et
- 2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada.

Dans le but de réduire les risques de brouillage radioélectrique à l'intention d'autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

8_Marking



The CE marking is the manufacturer's declaration that the product meets the requirements of the applicable EC directives. The CE mark is a mandatory conformity marking for certain products sold within the European Economic Area (EEA).



Waste of Electrical and Electronic Equipment (WEEE) symbol indicates that when the end-user wishes to discard this product, it must be sent to separate collection facilities for recovery and recycling. By separating this product from other household-type waste, the volume of waste sent to incinerators or landfills will be reduced and natural resources will thus be conserved.



Power charge symbol



USB symbol

● SEAMLESS PAYMENT

9_Troubleshooting

The terminal does not turn on

- Check the battery (is it discharged, is it connected?)
A full discharged battery can take long charging time to recover
- Connect terminal to terminal power supply

Cards are not read

- Check that the magnetic card is swiped correctly (with magnetic band on terminal side).
- Swipe again the card with the magnetic stripe movement constant and rapid
- Verify that the magnetic strip is not damaged, grooved or cracked
- Make sure you have inserted correctly the smart card into the smart card reader and removed the card only after the transaction is performed.

"This Document is Copyright © 2018 by INGENICO Group. INGENICO retains full copyright ownership, rights and protection in all material contained in this document. The recipient can receive this document on the condition that he will keep the document confidential and will not use its contents in any form or by any means, except as agreed beforehand, without the prior written permission of INGENICO. Moreover, nobody is authorized to place this document at the disposal of any third party without the prior written permission of INGENICO. If such permission is granted, it will be subject to the condition that the recipient ensures that any other recipient of this document, or information contained therein, is held responsible to INGENICO for the confidentiality of that information.

Care has been taken to ensure that the content of this document is as accurate as possible. INGENICO however declines any responsibility for inaccurate, incomplete or outdated information. The contents of this document may change from time to time without prior notice, and do not create, specify, modify or replace any new or prior contractual obligations agreed upon in writing between INGENICO and the user.

INGENICO is not responsible for any use of this device, which would be non consistent with the present document.

All trademarks used in this document remain the property of their rightful owners."

Your contact



www.ingenico.com

28-32, boulevard de Grenelle, 75015 Paris - France / (T) +33 (0)1 58 01 80 00 / (F) +33 (0)1 58 01 91 35
Ingenico - SA au capital de 47 656 332 / 317 218 758 RCS Nanterre

● SEAMLESS PAYMENT